


SPARE PARTS /
Parrot Disco / Propeller

Parrot
DISCO


To replace the propeller of the Parrot Disco, you need a T6 screwdriver.

It is recommended to use the Parrot Toolbox for this operation.


DIFFICULTY
LEVEL

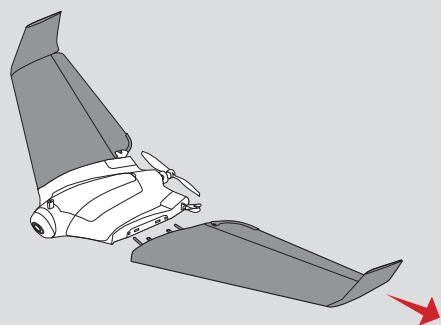


1 Pull on the wings to remove them.

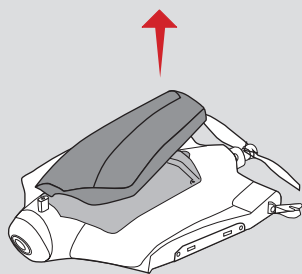


2 Open the cowling.

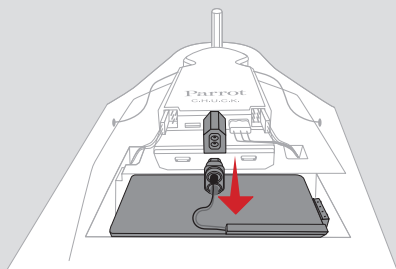


3 Disconnect the battery.

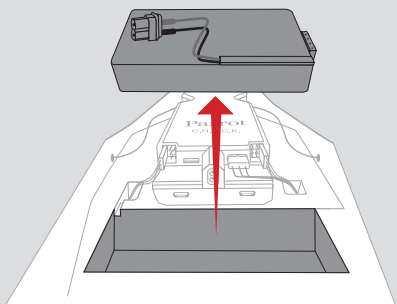


4 Remove the battery.

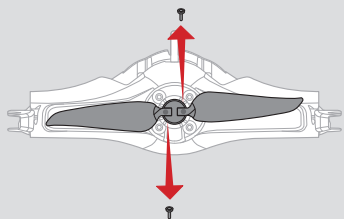

5 Use a T6 screwdriver to remove the 2 screws holding each blade.


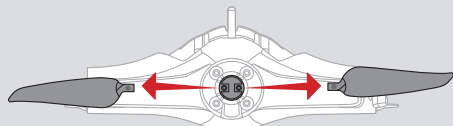


6 Remove the blades.

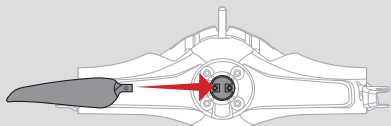


7 Take one blade and slide it into one of the slot of the propeller support.


Caution:
When looking at the propeller, the right blade must be pointing up, and the left blade must be pointing down.

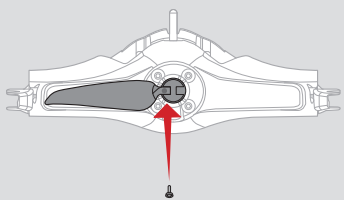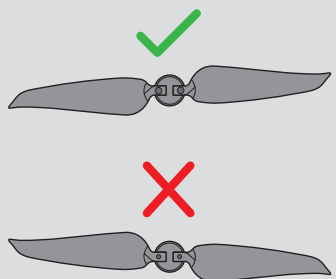

8 Use a T6 screwdriver to secure it.

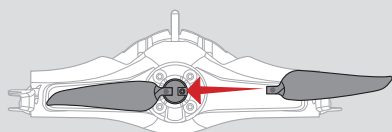

9 Take the second blade and slide it into the other slot.

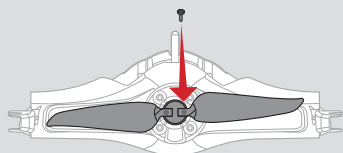

10 Use a T6 screwdriver to secure it.

Caution:
The 2 screws holding the blades must be opposite one from another.