


SPARE PARTS / Parrot Disco / Nose


To replace the nose of the Parrot Disco, you need a box cutter.

Parrot DISCO


DIFFICULTY
LEVEL

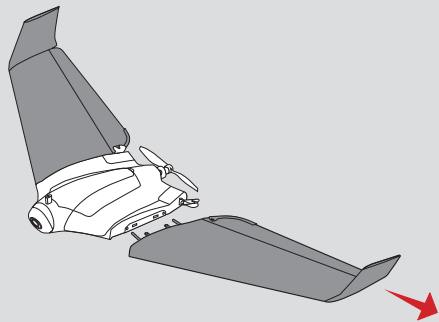


1 Pull on the wings to remove them.

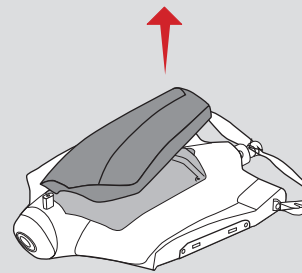


2 Open the cowling.

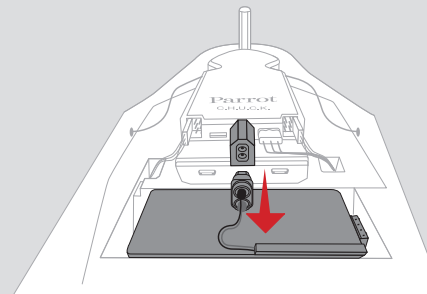


3 Remove the battery.

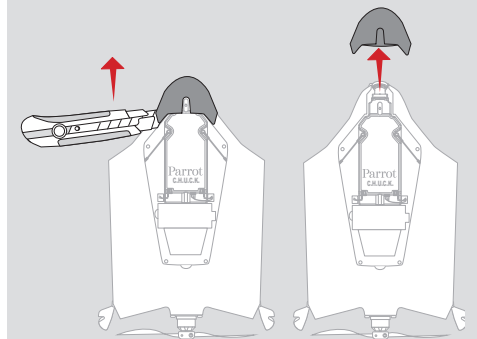


4 Using a box cutter, gently remove the nose of the Parrot Disco.

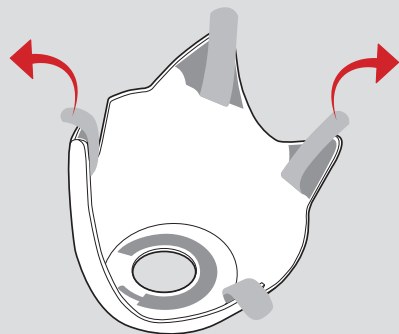


5 On the new nose, fold the four protections towards the outside of the blister.

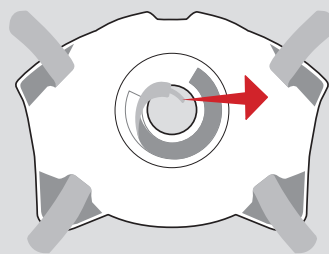

6 Remove the protection located inside the blister.

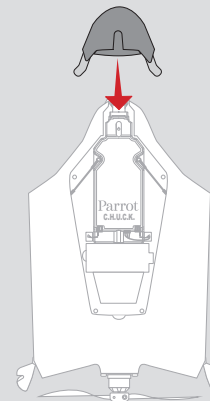

7 Slide the new nose in place. Make sure the four left protections are sticking out.

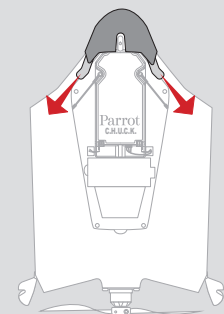

8 Once the nose is in place, remove the four protections and press on the new nose to make it stick properly to the EPP.