

# SPARE PARTS / Parrot Disco / Pitot tube

To replace the pitot tube of the Parrot Disco, you need a PH2 screwdriver.


It is recommended to use [the Parrot Toolbox](#) for this operation.

# Parrot DISCO


DIFFICULTY  
LEVEL




## 1 SEPARATE C.H.U.C.K FROM THE PARROT DISCO

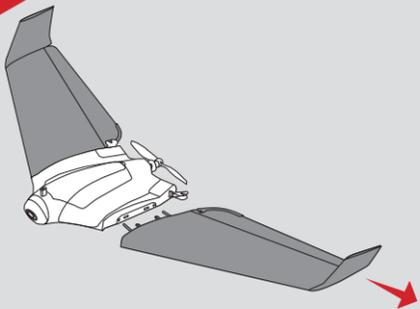


1 Pull on the wings to remove them.

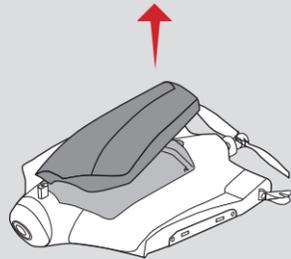


2 Open the cowling.

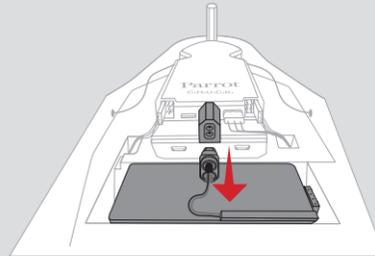


3 Disconnect the battery.

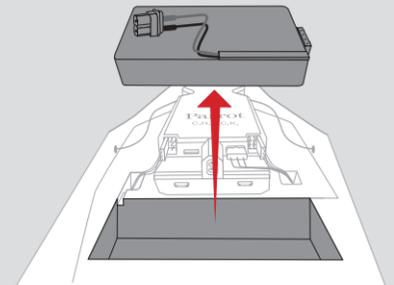


4 Remove the battery.

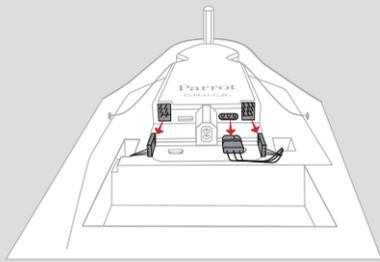


5 Unplug the servomotors and the motor of the Parrot Disco.

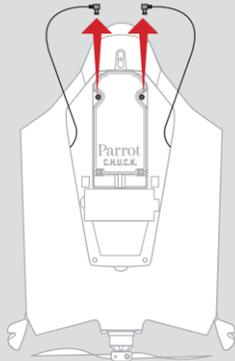

6 Unplug the antennas.

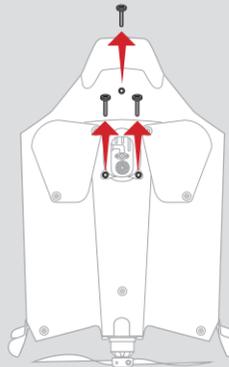


7 Use a PH2 screwdriver to remove the 3 screws holding the C.H.U.C.K. under the Parrot Disco.

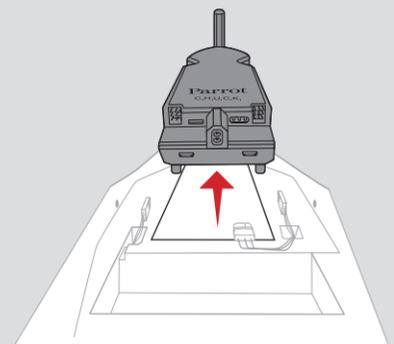


8 Carefully remove the C.H.U.C.K. from the Parrot Disco.

## 2 REPLACE THE PITOT TUBE

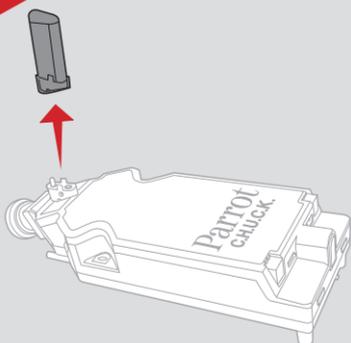


1 Gently pull on the pitot tube to remove it.

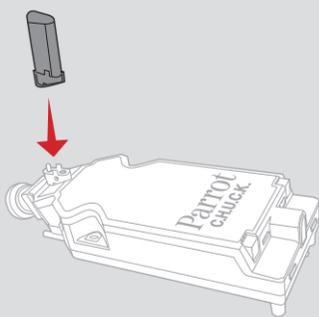


2 Put the new pitot tube into place.


## 3 REASSEMBLE THE C.H.U.C.K IN THE PARROT DISCO

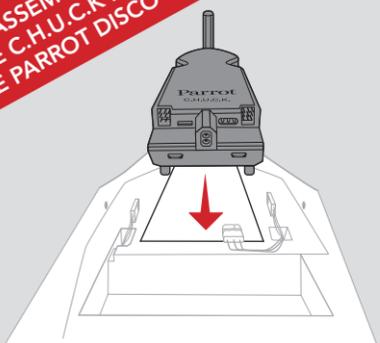


1 Put the C.H.U.C.K. back into place.

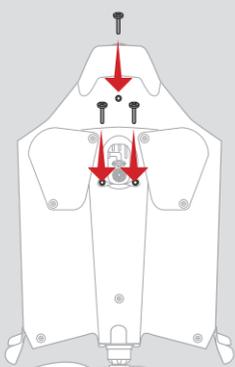

2 Use a PH2 screwdriver to secure the C.H.U.C.K.

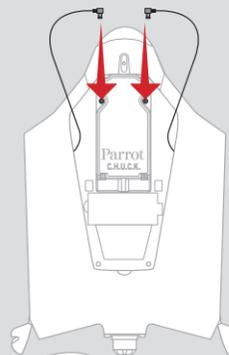

3 Connect the antennas back to the C.H.U.C.K.

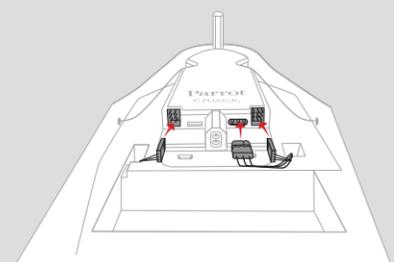

4 Connect the servomotors and the motors back to the C.H.U.C.K.